

Floor Standing Screens Instructions

Package Contents List

- 14 Screws
- 14 Bolts
- 14 Washers
- 2 Feet
- 2 Brackets
- 1 Foamed panel attached in frame already (bottom panel)
- 1 Clear panel attached in frame already (top Panel)

You Will Need

- 2 People
- 1 x Cross head screwdriver
- 1 x 10mm spanner/adjustable spanner

Step 1

Attach feet to bottom panel (as indicated by arrows in the picture) using 2 screws and 2 bolts. Then repeat on other side. (fig 1)

Step 2

Place top panel on the bottom section, attach this using the 2 screws and bolts in middle of panel, (as indicated in picture by the arrows). (fig 2)

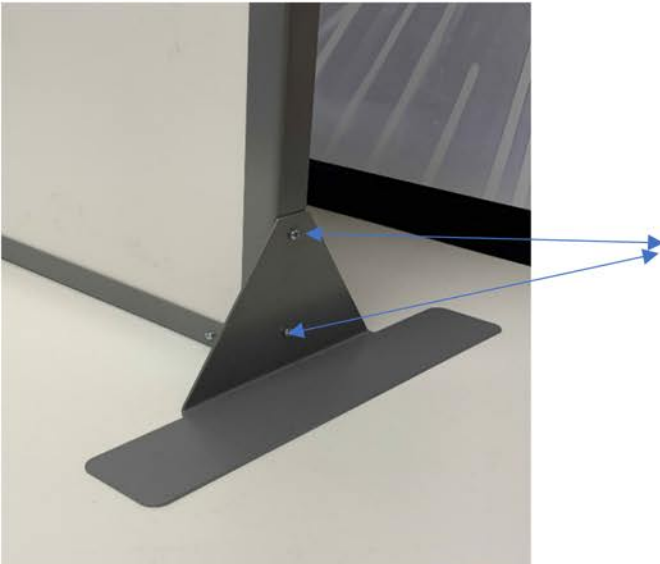


Fig 1.


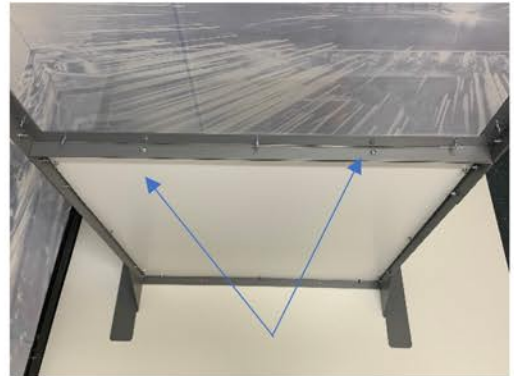


Fig 2.

Step 3

Place brackets on side of the panels, and using 4 screws and 4 bolts join both together (as indicated by arrows in picture). Then repeat on the other side.

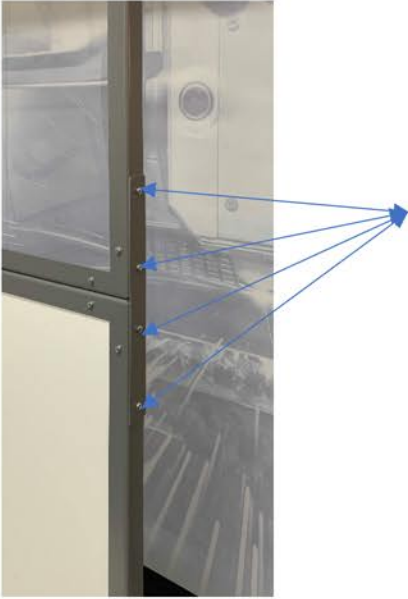

Step 4

Remove protective laminate from panels.

Finished product

